



Electrical measurement technology. Re-invented.

Simpler and safer: the new era of measuring instruments from Testo.

High-tech from the Black Forest.

For more than 55 years, Testo has stood for innovative measuring solutions made in Germany. As an expert in measurement technology and world market leader in portable measurement technology, we convince over 650,000 customers worldwide with highly precise measuring instruments for many different sectors. Whether in refrigeration, air conditioning and environmental technology, industrial applications, for exhaust and flue gas analysis, in the pharmaceutical and health sectors, for the monitoring of indoor air and food quality, or in the electrical field – we measure it. Our products help to save time and resources, to protect the environment and the health of humans, and to increase the value of goods and services.



With roots in the Black Forest.

At home all over the world. Our headquarters are in Lenzkirch in the Black Forest. However, Testo has for many years been a constantly growing global concern, now represented on all continents by 30 subsidiary companies and over 80 distribution partners. Roughly 2,500 Testorians worldwide research, develop, produce and market for the company with passion and expertise.

Cubsiciary companies Distributors

Our innovations are the engine which drives you forward.

The requirements for practical measurement solutions are becoming increasingly more complex and specific. That is why we have set ourselves the key task of identifying these customer requirements in industry and trade and translating them permanently into new technology. We carry out our own intensive research, which has given us a leading role in the market for decades. On the following pages, we present to you the result of extensive research in electrical measurement technology: revolutionary measuring instruments which make your daily job safer and more efficient than ever before.



Electrical measurement technology. Re-invented.

The innovative electrical measuring instruments from Testo stand out due to their extraordinary high level of userfriendliness, setting new standards with intelligent and completely new technology. Digital multimeters with automatic measurement parameter recognition, clamp meters with a unique grab mechanism, or voltage testers which also measure current – welcome to a new era.



Testing voltage on a heat pump with testo 755.



Measuring voltage on an outside refrigeration unit with testo 760.



Measuring current on an outside refrigeration unit with testo 755.



Error detection in a heating system with testo 750.



Measuring voltage on an air conditioning unit with testo 770.



Checking voltage on a distributor box with testo 745.

Recognizes measurement parameters automatically.

The digital multimeter testo 760.

The three models of the testo 760 eliminate incorrect settings, because the measurement parameters are detected automatically via the assignment of the measuring sockets and also shown by the illumination of the appropriate function keys. Function keys replace the traditional dial, which means easier operation and greater reliability.



Measurement parameter recognition by socket allocation

Easy, modern operation with function keys instead of a dial



100

True root mean square measurement - TRMS

Large, backlit LCD display



Testing voltage in the switching box of a heat pump.



Testing voltage in a switching cabinet.



Ionization current measurement set-up

Digital multimeter model comparison	testo 760-1	testo 760-2	testo 760-3
Automatic measurement parameter detection			
Easy and modern operation with function keys instead of a dial			
Illuminated display			
True root mean square measurement - TRMS			
µA current measuring range			
Low-pass filter			
Voltage range up to 1,000 V			

Technical data	testo 760-1	testo 760-2	testo 760-3
Voltage measuring range	0.1 mV to 600 V AC/DC		0.1 mV to 1,000 V AC/ DC
Current measuring range	1 mA to 10 A AC/DC	0.1 µA to 10 A AC/DC	
Resistance measuring range	0.1 to 40 MΩ	0.1 to 60 MΩ	
Frequency measuring range	0.001 Hz to 500 kHz	0.001 Hz to 30 MHz	0.001 Hz to 60 MHz
Capacitance measuring range	0.001 nF to 100 μF	0.001 nF to 30,000 μF	0.001 nF to 60,000 μF
Temperature measuring range	-	-20 to -	⊧500 °C
Display (counts)	4,000	6,000	
Measurement category	CAT IV 300 V CAT III 600 V		′ 600 V 1000 V
Protection class	IP 64		
Authorizations	TÜV, CSA, CE		
Standards	EN 61326-1		

Grab cables without touching.

The clamp meter testo 770.

The three instruments in the testo 770 clamp meter family are ideally suited for current measurement in switching cabinets. One of the two pincer arms can be fully retracted into the instrument. This unique grab mechanism means that cables in tight switching cabinets can be easily grabbed. The automatic measurement parameter detection also ensures reliable work: in the current and voltage area, all three instruments detect direct and alternating current and select other parameters such as resistance, continuity, diode and capacitance automatically.





Measuring current in a switching cabinet.



Measuring voltage on the switching box of a heat pump with suspended measuring instrument.



Hooking the clamp meter into an outside refrigeration unit.

Clamp meter model comparison	testo 770-1	testo 770-2	testo 770-3
Unique grab mechanism			
Automatic measurement parameter detection			
Two-line display			
True root mean square measurement - TRMS			
Inrush measurement			
µA current measuring range			
Bluetooh and testo Smart Probes App			
Power measurement			

Technical data	testo 770-1	testo 770-2	testo 770-3
Voltage measuring range	1 m'	V to 600 V AC	C/DC
Current measuring range	0.1 to 400	A AC/DC	0.1 to 600 A AC/DC
Power measurement	-	-	~
µA measuring range	-	0.1 to 400	µA AC/DC
Resistance measuring range			0.1 Ω to 60 MΩ
Frequency measuring range	0.0	01 Hz to 10 I	kHz
Capacitance measuring range			0.001 μF to 60,000 μF
Temperature measuring range	– -20 to +500 °C		+500 °C
Bluetooh and testo Smart Probes App	- ✓		~
Display (counts)	4,000 6,000		6,000
Measurement category	CAT IV 600 V / CAT III 1000 V		I 1000 V
Authorizations	TÜV, CSA, CE		
Standards	EN 61326-1, EN 61140		

Comfortably legible from any position.

The voltage tester testo 750.

The three models in the testo 750 voltage tester family are the first instruments with an all-round LED display. The display can be seen from any position and guarantees an ideal voltage indication thanks to its unique fibre optics. All three models meet the latest voltage tester standard EN 61243-3:2010 and have a safety specification according to CAT IV. They have the most important functions for voltage testing, continuity testing and rotating magnetic field measurement.



360°

Clear, patented all-round display with fibre-optic technology

Anti-slip ring for secure grip



Ergonomic handle shape



Measuring point illumination



Measuring voltage in a switching cabinet.



Measuring voltage on a compressor.



Measuring voltage on a boiler.

Voltage tester model comparison	testo 750-1	testo 750-2	testo 750-3
Patented all-round LED display			
Fibre-optics for optimum voltage indication			
Anti-slip ring			
Ergonomic handle shape			
Certified according to voltage tester norm DIN EN 61243-3:2010.			
Measurement point illumination			
Single-pole voltage testing			
RCD trigger function			
Additional LC display			

50-2 750-3		
12 to 690 V AC/DC		
< 500 kΩ		
100 to 690 V AC/DC at 50/60 Hz		
- 100 to 690 V AC/DC a 50/60 Hz		
CAT IV 600 V / CAT III 1000 V		
IP 64		
TÜV, CSA, CE		
EN 61243-3:2010		
F		

The first voltage tester measuring current.

The current/voltage tester testo 755.

They are the first of their kind: voltage testers which meet the latest standard and which can also measure current. This means the two instruments are suitable for virtually all daily electrical measuring tasks. Each time they are used they automatically select the right settings and therefore prevent dangerous incorrect settings. Both models have all the important functions for determining voltage/deenergization, for measuring current and resistance, as well as for continuity tests. Their measuring tips can be changed easily, so that the whole instrument does not need to be replaced in the event of damage.



Measuring voltage on a compressor.

Technical data	testo 755-1	testo 755-2
Voltage measur- ing range	6 to 600 V AC/DC	6 to 1000 V AC/DC
Current	0.1 to 2	00 A AC
Resistance	1 Ω to	100 kΩ
Continuity testing	< 50 Ω	
Rotating mag- netic field testing	-	100 to 690 V AC at 50/60 Hz
Single pole phase testing	-	100 to 690 V AC at 50/60 Hz
Display (counts)	4,0	000
Measurement category		' 600 V 1000 V
Protection class	IP	64
Authorizations	TÜV, C	SA, CE



Automatic measurement parameter detection

Certified according to voltage tester norm DIN EN 61243-3:2010

Measurement result without any switching on or selection

Measuring point illumination

Exchangeable measuring tips

Current/voltage tester model comparison	testo 755-1	testo 755-2
Certified according to voltage tester norm DIN EN 61243-3:2010.		
Automatic measurement parameter detection		
Measuring point illumination		
Exchangeable measuring tips		
Voltage range up to 1,000 V		
Single pole phase testing		
Rotating field measurement		

Filters high-frequency interference.

The non-contact voltage tester testo 745.

The non-contact voltage tester with a measuring range of up to 1,000 V is particularly well-suited to fast initial checking of any suspected fault sources. When the presence of alternating voltage is determined, the testo 745 gives a warning via a clear visual and acoustic signal. In order to increase the reliability, the voltage tester has a filter for highfrequency interference.



First test of voltage supply on a compressor.

Technical data	
Voltage testing	12 to 1,000 V AC
Measurement category	CAT IV 600 V CAT III 1000 V
Authorizations	CSA, CE
Standards	EN 61326-1, EN 61010-1



Filter blocks high-frequency interference signals

Adjustable sensitivity

Visual and acoustic signal



Measuring point illumination

Waterproof and dustproof according to IP 67

Ordering data

Multimeter testo 760Order no.testo 760-1, multimeter, including batteries and 1 set of measuring cables0590 7601testo 760-2, TRMS multimeter, including batteries, 1 set of measuring cables and 1 x adapter for type K thermocouples0590 7602testo 760-3, TRMS multimeter, including batteries and 1 set of measuring cables0590 7603testo 760-1/-2/-3 accessories0590 0001Magnetic hook0590 0009Set of safety crocodile clips0590 0009Set of rocodile clips0590 0001Set of rocodile clips0590 0011(angled plug)0590 0011Set of 4 mm standard measuring cables (straight plug)0590 0012Set of measuring cable extensions (straight plug)0590 0013Set of measuring cable extensions (angled plug)0590 0014Set of measuring cable extensions (straight plug)0590 0016Set of transport bag0590 0016SO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0590 0005Set of 5 x 630 mA/600 V spare fuses0590 0002Clamp meter adapter0590 0002Clamp meter adapter0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503t		
and 1 set of measuring cables0590 7602testo 760-2, TRMS multimeter, including batteries, 1 set of measuring cables and 1 x adapter for type K thermocouples0590 7603testo 760-3, TRMS multimeter, including batteries and 1 set of measuring cables0590 7603testo 760-1/-2/-3 accessoriesMagnetic hook0590 0001Set of safety crocodile clips0590 00080009Set of safety crocodile clips0590 00100009Set of 2 mm standard measuring cables0590 0011(angled plug)0590 00110000Set of 4 mm standard measuring cables0590 0012(straight plug)0590 00130011Set of measuring cable extensions0590 0014(angled plug)0590 00160000Set of measuring cable extensions0590 0016(straight plug)0590 0016Set of Transport bag0590 0016ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0003Set of 5 x 10 A/600 V spare fuses0590 0003Clamp meter adapter0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps	Multimeter testo 760	Order no.
batteries, 1 set of measuring cables and 1 x adapter for type K thermocouples0590 7603testo 760-3, TRMS multimeter, including batteries and 1 set of measuring cables0590 0001testo 760-1/-2/-3 accessories0590 0001Magnetic hook0590 0008Set of safety crocodile clips0590 0009Set of rocodile clips0590 0009Set of crocodile clips0590 0010(angled plug)0590 0011Set of 4 mm standard measuring cables (angled plug)0590 0012Set of 4 mm standard measuring cables (straight plug)0590 0013Set of measuring cable extensions (straight plug)0590 0014Set of measuring cable extensions (angled plug)0590 0014Set of measuring cable extensions (straight plug)0590 0016So calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0002Clamp meter adapter0590 0003testo 760-3 accessories0590 0004Thermocouple adapter (Type K)0590 0004Clamp meter adapter0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 760-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-2, voltage tester including batteries, measuring tip protect		0590 7601
batteries and 1 set of measuring cablesImage: Cable State S	batteries, 1 set of measuring cables and 1 x	0590 7602
Magnetic hook0590 0001Set of safety crocodile clips0590 0008Set of crocodile clips0590 0009Set of 2 mm standard measuring cables0590 0010(angled plug)0590 0011Set of 4 mm standard measuring cables0590 0012(straight plug)0590 0013Set of measuring cable extensions0590 0013(straight plug)0590 0014Set of measuring cable extensions0590 0014(angled plug)0590 0016Set of measuring cable extensions0590 0016(straight plug)0590 0016Set of measuring cable extensions0590 0016ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0004Clamp meter adapter0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590		0590 7603
Set of safety crocodile clips0590 0008Set of crocodile clips0590 0009Set of 2 mm standard measuring cables (angled plug)0590 0010Set of 4 mm standard measuring cables (straight plug)0590 0012Set of 4 mm standard measuring cables (straight plug)0590 0013Set of measuring cable extensions (straight plug)0590 0014Set of measuring cable extensions (angled plug)0590 0014Set of measuring cable extensions (angled plug)0590 0016Set of measuring cable extensions (angled plug)0590 0016Set of measuring cable extensions (angled plug)0590 0016Set of Tansport bag0590 0016ISO calibration certificate multimeter0520 0760DAkks calibration certificate multimeter0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0004Set of 5 x 630 mA/600 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	testo 760-1/-2/-3 accessories	
Set of crocodile clips0590 0009Set of 2 mm standard measuring cables (angled plug)0590 0010Set of 4 mm standard measuring cables (straight plug)0590 0011Set of 4 mm standard measuring cables (straight plug)0590 0012Set of measuring cable extensions (straight plug)0590 0013Set of measuring cable extensions (angled plug)0590 0014Set of measuring cable extensions (angled plug)0590 0016Set of measuring cable extensions (angled plug)0590 0016Set of transport bag0590 0016ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Clamp meter adapter0590 0003testo 760-3 accessories0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Magnetic hook	0590 0001
Set of 2 mm standard measuring cables (angled plug)0590 0010Set of 4 mm standard measuring cables (angled plug)0590 0011Set of 4 mm standard measuring cables (straight plug)0590 0012Set of measuring cable extensions (angled plug)0590 0013Set of measuring cable extensions (angled plug)0590 0014Set of measuring cable extensions (angled plug)0590 0016Set of measuring cable extensions (angled plug)0590 0016Set of measuring cable extensions (angled plug)0590 0016So calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0002Clamp meter adapter testo 760-3 accessories0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 0018testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Set of safety crocodile clips	0590 0008
(angled plug)0Set of 4 mm standard measuring cables (straight plug)0590 0011Set of 4 mm standard measuring cables (straight plug)0590 0012Set of measuring cable extensions (straight plug)0590 0013Set of measuring cable extensions (angled plug)0590 0014Set of measuring cable extensions (angled plug)0590 0016So calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0003Clamp meter adapter0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 30 mA/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Set of crocodile clips	0590 0009
(angled plug)Set of 4 mm standard measuring cables (straight plug)0590 0012 (straight plug)Set of measuring cable extensions (angled plug)0590 0013Set of measuring cable extensions (angled plug)0590 0014testo 760 transport bag0590 0016DAkkS calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessories0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 00 A/1000 V spare fuses0590 0004Clamp meter adapter0590 0004Set of 5 x 00 mA/1000 V spare fuses0590 0004Set of 5 x 00 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0590 0018		0590 0010
(straight plug)0590 0013Set of measuring cable extensions (argled plug)0590 0014testo 760 transport bag0590 0016ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0007Thermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0003testo 760-3 accessories0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 03 mA/1000 V spare fuses0590 0004Set of 5 x 03 mA/1000 V spare fuses0590 0004Set of 5 x 03 mA/1000 V spare fuses0590 0004Set of 5 x 03 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0590 0018ISO calibration certificate voltage tester0520 0750		0590 0011
(straight plug)0590 0014Set of measuring cable extensions (angled plug)0590 0016testo 760 transport bag0590 0016ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0007Thermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessories0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750		0590 0012
(angled plug)0590 0016testo 760 transport bag0590 0016ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories0590 0005Set of 5 x 10 A/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0007Thermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessories0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 7501testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	5	0590 0013
ISO calibration certificate multimeter0520 0760DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessories5Set of 5 x 10 A/600 V spare fuses0590 0005Set of 5 x 630 mA/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0003testo 760-3 accessories0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750 accessories0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750		0590 0014
DAkkS calibration certificate multimeter0520 0761testo 760-1/-2 accessoriesSet of 5 x 10 A/600 V spare fuses0590 0005Set of 5 x 630 mA/600 V spare fuses0590 0007testo 760-2/-3 accessoriesThermocouple adapter (Type K)0590 0003Clamp meter adapter0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	testo 760 transport bag	0590 0016
testo 760-1/-2 accessoriesSet of 5 x 10 A/600 V spare fuses0590 0005Set of 5 x 630 mA/600 V spare fuses0590 0007testo 760-2/-3 accessoriesThermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessories0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	ISO calibration certificate multimeter	0520 0760
Set of 5 x 10 A/600 V spare fuses0590 0005Set of 5 x 630 mA/600 V spare fuses0590 0007testo 760-2/-3 accessories0590 0002Thermocouple adapter (Type K)0590 0003clamp meter adapter0590 0003testo 760-3 accessories0590 0004Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-2, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-3, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750 accessoriestesto 750 accessoriestesto 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	DAkkS calibration certificate multimeter	0520 0761
Set of 5 x 630 mA/600 V spare fuses0590 0007testo 760-2/-3 accessoriesThermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessoriesSet of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fusesOrder no.Voltage tester testo 750Order no.testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-2, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-3, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750 accessoriestesto 750 accessoriestesto 750 accessoriestesto 750 transport bag0590 0018ISO calibration certificate voltage tester	testo 760-1/-2 accessories	
testo 760-2/-3 accessoriesThermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessories5Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Set of 5 x 10 A/600 V spare fuses	0590 0005
Thermocouple adapter (Type K)0590 0002Clamp meter adapter0590 0003testo 760-3 accessoriesSet of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Set of 5 x 630 mA/600 V spare fuses	0590 0007
Clamp meter adapter0590 0003testo 760-3 accessoriesSet of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-2, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-3, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-3, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-3, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750 accessories testo 750 transport bagtesto 750 transport bagtesto 750 calibration certificate voltage tester0520 0750	testo 760-2/-3 accessories	
testo 760-3 accessoriesSet of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Thermocouple adapter (Type K)	0590 0002
Set of 5 x 10 A/1000 V spare fuses0590 0004Set of 5 x 630 mA/1000 V spare fuses0590 0006Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Clamp meter adapter	0590 0003
Set of 5 x 630 mA/1000 V spare fuses 0590 0006 Voltage tester testo 750 Order no. testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps 0590 7501 testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps 0590 7502 testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps 0590 7503 testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps 0590 7503 testo 750 accessories 0590 0018 testo 750 transport bag 0590 0018 ISO calibration certificate voltage tester 0520 0750	testo 760-3 accessories	
Voltage tester testo 750Order no.testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Set of 5 x 10 A/1000 V spare fuses	0590 0004
testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750	Set of 5 x 630 mA/1000 V spare fuses	0590 0006
testo 750-1, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7501testo 750-2, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7502testo 750-3, voltage tester including batteries, measuring tip protector and measuring tip caps0590 7503testo 750 accessories0590 0018testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750		
measuring tip protector and measuring tip capstesto 750-2, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750-3, voltage tester including batteries, measuring tip protector and measuring tip capstesto 750 accessoriestesto 750 transport bagISO calibration certificate voltage tester		
measuring tip protector and measuring tip caps	measuring tip protector and measuring tip caps	0590 7501
measuring tip protector and measuring tip caps testo testo 750 accessories testo 750 transport bag 0590 0018 ISO calibration certificate voltage tester 0520 0750	, , , , , , , , , , , , , , , , , , , ,	0590 7502
testo 750 transport bag0590 0018ISO calibration certificate voltage tester0520 0750		0590 7503
ISO calibration certificate voltage tester 0520 0750	testo 750 accessories	
	testo 750 transport bag	0590 0018
DAkkS calibration certificate voltage tester 0520 0751	ISO calibration certificate voltage tester	0520 0750
-	DAkkS calibration certificate voltage tester	0520 0751

Clamp meter testo 770	Order no.
testo 770-1, TRMS current probe, including batteries and 1 set of measuring cables	0590 7701
testo 770-2, TRMS current probe, including batteries, 1 set of measuring cables and 1 x adapter for type K thermocouples	0590 7702
testo 770-3, TRMS current probe, including batteries and 1 set of measuring cables	0590 7703
testo 770 accessories	
Thermocouple adapter Type K (for testo 770- 2/-3 only)	0590 0021
Set of safety crocodile clips	0590 0008
Set of crocodile clips	0590 0009
Set of 4 mm standard measuring cables (angled plug)	0590 0011
Set of 4 mm standard measuring cables (straight plug)	0590 0012
Set of measuring cable extensions (straight plug)	0590 0013
Set of measuring cable extensions (angled plug)	0590 0014
testo 755 / testo 770 transport bag	0590 0017
ISO calibration certificate clamp meter	0520 0770
DAkkS calibration clamp meter	0520 0771
Current/voltage tester testo 755	Order no.
testo 755-1, current/voltage tester including batteries and measuring tips	0590 7551
testo 755-2, current/voltage tester including batteries and measuring tips	0590 7552
testo 755 accessories	
testo 755 / testo 770 transport bag	0590 0017
Set of replacement measuring tips	0590 0015
ISO calibration certificate current/voltage tester	0520 0755
DAkkS calibration certificate current/voltage tester	0520 0756
Non-contact voltage tester testo 745	Order no.
testo 745, non-contact voltage tester	0590 7450
including batteries	
including batteries ISO calibration certificate voltage tester	0520 0750